



FLEXCUBE

Bluetooth speaker

Thanks for choosing our Bluetooth speaker. Please read the whole instruction booklet to ensure the best possible use of your product. Only use the included cables. Depending on the charging station, hissing could be heard for a short time at the start of the charging process. After not using the speaker for a longer time the battery can be fully discharged. In this case, there can be a delay until the charging LED is flashing. The Bluetooth speaker needs about three hours until it is fully charged, depending on your power supply.

Product specification

1. Supports all Bluetooth versions, 10 m connection, wireless communication (using Bluetooth protocol specifications CLASS 2)
2. Built-In Battery: 3.7V lithium-ion-battery. You can use the included USB cable to charge the speaker at 5V using a PC or another USB power supply.
3. Bluetooth version: 3.0 (A2DP and AVRCP profiles)
4. Works with most Bluetooth-supported devices like tablets or smartphones.

Instructions

1. Turn the speaker on by using the switch on the side of the speaker. There will be a sound played when turning it on.
2. Activate Bluetooth on your device you want to pair and activate "search for devices". Connect it to your Bluetooth speaker which is called "ADD-FLEXCUBE". Another sound is played if the connection was successful. You can now play your music using your connected device.

3. To play music from a MicroSD-Card it must be in MP3 format. Insert your memory card to start playing.
 4. Choose your music by pressing the next/previous buttons. You can change volume by pressing the vol+/vol- buttons. Press pause/play to pause a playing song or to continue playing a song.
 5. To play music using the USB port you can insert an USB flash drive into the USB-slot for example. If the USB flash drive contains MP3 files the Music will start playing automatically.
 6. To use the speaker without Bluetooth you can directly connect it to headphones using the included audio cable.
 7. Answer call: Press Play/Pause to answer an incoming call.
 8. Mute call: Press Play/Pause again to mute your call.
- The minimum distance to the built-in microphone should be at least 1,97 inches.*

Caution

Do not use in damp environment to avoid damage.

The product should be kept away from fire and other high temperature environment to avoid damage and explosions.

Continuously high volume can cause permanent hearing damage.

Do not try to open or repair the speaker.

Do not use a chemical detergent, but a dry cloth for cleaning.

Please do not pollute the environment when discarded - try to classify recycling.

GK Handelsplan GmbH
Magdeburger Straße 38-40
47800 Krefeld, Germany

